

# Contact Tracing Solution Diagram Guide




For full installation instructions, use the QR code to follow along in the User Guide.

<http://qrcodes.bluecats.com/CTS>

## 1. Unbox and Power Up

Unbox SafetyTags™, Charging Station, and ProxPoint™

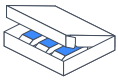


Set up the ProxPoint



Set up the Charging Station




Insert SafetyTags into Charging Station

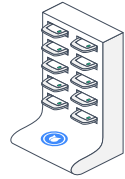

## 2. Log in to Loop Mobile

Read the Quick Start Card

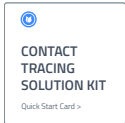

Download the BlueCats Loop Mobile app



Android



iOS

Open the app, log in with the provided credentials



## 3. Associate a Person with a SafetyTag


Scan or Tap personnel badge or ID card



Scan QR code on SafetyTag




Confirm association

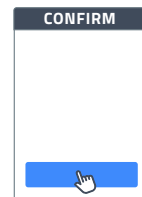

## 4. Clip On and Work Safely

Wear the SafetyTag using the provided belt clip, or via lanyard

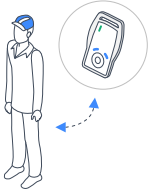

Events are created and stored on the SafetyTag based on distance



Within range of a ProxPoint, SafetyTags offload events to Loop Cloud 2



### Nearby Events:

within 3 m of another SafetyTag

### Contact Events:

within 1.5 m of another SafetyTag

## 5. View Reports in Loop Cloud 2

Visit Loop Cloud 2 and log in with the provided credentials



From the Dashboard, search for a SafetyTag or Person



View and download all Nearby and Contact Events in report form

